USER MANUAL

CREATE MORE XITEMENT

CRC 7210

STEREORADIO

Dear customer!

First of all thank you very much, that you have decided for the

cmx® CRC 7210!

Please read all information’s carefully before you start running the cmx® CRC 7210.

Our company reserves the right to improve the product. That changes to specifications and design, also without notice.

If you have problems, please visit our website at

www.cmx-electronics.com

and select your device.

Under the point "Support" you find the most frequently asked questions about your device - if not, please use the contact form.

If you provide variations of your product, please visit our website.

Index of contents

1. SAFETY INFORMATIONS 4

2. LOCATION OF CONTROLS 5

3. INCLUDED IN DELIVERY 6

4. CONNECTORS 7

4.1. POWER SUPPLY 7
4.2. BATTERY OPERATION 7
4.3. HEADPHONE 7

5. CD-PLAYER 8

5.1. INSERT AND REMOVAL OF DISCS 8
5.2. CD- AND MP3-CD OPERATION 8
5.3. SKIP+10 & FOLDERS ON MP3-CD 9
5.4. CD REPEAT 10
5.5. PROGRAMMING 10

6. RADIO 12

7. SPECIFICATIONS 13

1. Safety Informations

The lightning flash is a warning sign alerting you of „dangerous voltage“ inside the product.

The exclamation point is a warning sign alerting you of important instructions accompanying the product.

WARNING

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing liquids.

NOTE

Caution symbols are printed on lower side of unit. Please refer to instruction manual.

CAUTION

- Grounding or polarization. The precautions should be taken so that the wider blade of the AC plug must match the slot in receptacle “wall socket”.
- Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.

CLASS 1 LASER PRODUCT

2. Location of controls

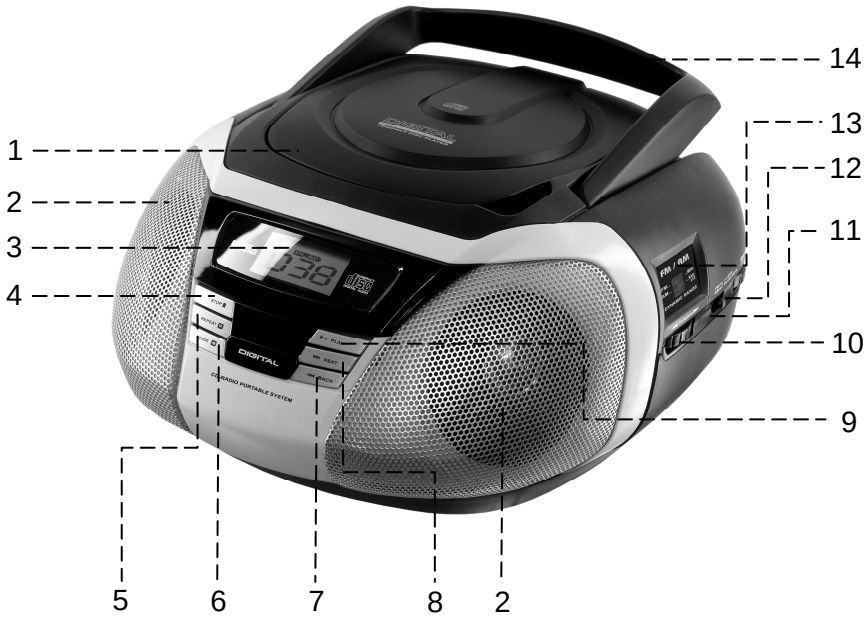

1. CD door
2. Speakers (left/right)
3. Display
4. CD “STOP“
5. CD “REPEAT/PROGRAM”
6. “SKIP+10/FOLDER”
7. CD “BACK”
8. CD “NEXT“
9. CD “PLAY/PAUSE”
10. Radio tuning control
11. Function switch (AM / FM / OFF / CD)
12. Volume control
13. Radio dial scale window
14. Handle

3. Included in delivery

User's manual

Warranty card

4. Connectors

4.1. Power supply

- This set works on normal household AC-power.
- Make sure the set voltage of unit matches your local voltage.
- Insert the plug oft he AC-cord into a wall outlet with AC-power.

NOTE

Please make sure to set the function switch to “OFF“ position when unit is not in use to conserve power.

4.2. Battery operation

- Open the battery door and insert 6 pieces “C-cell” (UM-2/LR14 type) batteries. Please observe correct battery polarities or the set will not work.

IMPORTANT

When the set is not used or is only used with „AC“, please remove the batteries, to avoid damage to the set from leakage of batteries.

4.3. Headphone

- To connect the headphones or earphones insert the cable into socket on the rear of main unit.
- When the plug of a headphone is inserted into this jack, the built-in speakers will automatically be disabled. When the headphone is disconnected, the speakers will be re-activated.

5. CD-Player

5.1. Insert and removal of discs

- When opening the CD-door, always ensure the disc is not in motion (not spinning) when you open the CD-door. Always press the "STOP" key to stop the disc spinning first.
- Place a CD into the compartment with the label-side (printed side of disc) facing upwards. Press down in the center part of disc until the disc "locks" onto the center spindle.
- When the CD has been placed onto the center spindle, gently lower the CD-door downwards until it locks shut.
- The CD is now ready to be played.
- To remove a disc, follow the same procedure as described above, except to remove the CD instead of inserting it into the compartment, by placing one finger at the middle of disc (center spindle) and the other at the edge of the disc and gentle pulling upwards.

5.2. CD- and MP3-CD operation

- Insert a CD (or MP3-CD) as described. Set the function switch to "CD".
- Once the CD door is closed (with a disc inside) the set will immediately read the disc and the display shows the number from the song (tracks).
- Press "PLAY/PAUSE" key and the disk will start spinning and than playing the first song (track).
- At anytime during playback, press "PLAY/PAUSE" to stop the operation of the unit. Press "PLAY/PAUSE" to resume the operation at the same track and position.

- At anytime during playback, press ”STOP” key to stop the operation of the set. This will reset the set to the first track.
- At anytime during playback, “press and release” the ”BACK/NEXT” keys to skip backwards or forwards by one track, as desired.

5.3. SKIP+10 & folders on MP3-CD

MP3 files (songs) can be organized into folders when you record them on to a CD-R disc. You can (for example) organize your folders on a disc so that each folders contain songs by a particular artist, or alternatively, by a different genre or type. You can organize songs & folders in any way you wish so that you can locate & play back those songs with greater ease and convenience.

If your MP3-CD has no folders, you can use the “SKIP+10/FOLDER” key to jump 10 songs ahead. This is useful if you have many songs on you want to quickly jump to a particular song.

- Press and release “SKIP+10/FOLDER” several times until you reach a song number near to your desired song, and then press “BACK” or “NEXT” repeatedly to arrive and the exact song you desire.

If your MP3-CD has folders, you can select the folder to playback by pressing and holding the “SKIP+10/FOLDER” button for about 2 seconds.

- Each time you press and hold the “SKIP+10/FOLDER” key (for 2 seconds), the player jumps to the first song in the next folder.

  The display will alternate between the song number & the folder number every 5 seconds.

  NOTE

  The “folder” function only works on MP3-discs which have folders. If your disc has no folders, pressing

"SKIP+10/FOLDER" will perform the "SKIP+10/FOLDER" "SKIP+10" function.

5.4. CD repeat

- At anytime during playback, press the "REPEAT/PROGRAM" key once, than the set will repeat the current track (Repeat symbol will "flash").
- At anytime during playback, press the "REPEAT/PROGRAM" key twice, than the set will repeat all tracks (Repeat symbol will stay "on".

5.5. Programming

The CD player can be programmed to play any sequence of up to 20 (CD) or 99 (MP3-CD) tracks, as desired.

- Always press the "STOP" key before starting the programming.
- Press the "REPEAT/PROGRAM" key, the display will show a "P" symbol and the display will show "po1" to indicate that the set is now in "memory programming mode", at memory position No. 1.
- Press the "BACK" or "NEXT" to select the track (song) number you wish to be stored in the first memory (program) position, and press the "REPEAT/PROGRAM" key to confirm your selection.
- Repeat the previous 2 Steps, each time selecting any track number of your choice to be stored in the successive memory (program) positions.
- After each track number, remember to press the "REPEAT/PROGRAM" key.

- After a maximum of 20 (CD) or 99 (MP3-CD) songs (or less) have been selected as described above, press the "REPEAT/PROGRAM" key.
- Also, the "P" symbol will remain "on" to indicate that you saved a program-memory (sequence).
- Pressing "PLAY/PAUSE" key will now play back the "saved sequence" in the program memory.
- Pressing "NEXT/BACK" will move to the next or previous song in the saved sequence.
- To clear (cancel) the entire program which is stored in the memory, simply press "STOP", or switch off the set.

6. Radio

Set the function switch to “radio”.

- Set the radio band selector switch to the desired band.
  - FM radio reception: fully extend the FM antenna wire and adjust its position
  - AM (MW) radio reception: rotate or re-position the main unit
- Rotate tuning knob to tune-in the desired station, as displayed in the LCD digital display.
- Adjust the volume to desired level.

7. Specifications

Formats	Audio-CD / CD-R / CD-RW / MP3-CD / MP3-CD-R / MP3-CD-RW
Connectors	headphone
Radio	AM / FM
Frequency	AM 530 – 1600 kHz FM 87,5 – 108 Mhz
Speakers	maximum 120 Watt PMPO
Power consumption	15 W
Power supply	AC 230 V ~ 50/60 Hz
Batteries	6 pieces C/UM-2/LR14 – 9V

- The apparatus should not be exposed to dripping or splashing and no objects filled with liquids should be placed on the apparatus.
- The marking and rating label is located at rear enclosure of the apparatus.
- The mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnected the power input. The mains plug of the apparatus shall be disconnected from the mains completely. The mains plug should not be obstructed or should be easily accessed during intended use.
- Under the influence of electrostatic phenomenon, the product may malfunction and user to power reset.

- Excessive sound pressure from earphones and headphones can cause hearing loss.

Electrostatic discharge (ESD) Precaution

When electrostatic discharge (ESD) occurs

- at the front surface (whether metal or plastic)
- or near any part
- or any buttons of this unit

there may be a possibility that the product may stop operation and/or shut down immediately.

This is a normal condition and intended to protect the unit and internal components against damage.

In such a case, please reset the unit (by disconnecting and reconnecting AC power source) to revert the unit to normal operation.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.